 


Filling Procedure

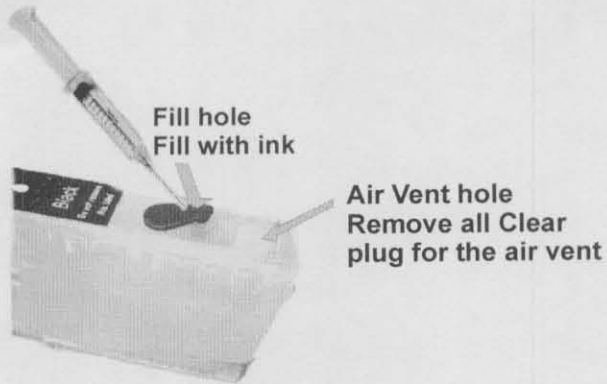

Filling Procedure

1. Pull out the fill hole plug.
2. Make sure the syringe is a snug fit in the cartridge, Use the 10ml syringe to draw in 5ml ink from your main supply bottle. Then insert it into the refilling hole.
3. Insert the syringe with the ink into the refilling hole of the cartridge and Pull up the plunger for about another 5ml then let the plunger go so the vacuum will pull the ink into the cartridge.
Note: Please kindly note not to press the plunger down, or it will cause the ink to splash out immediately.
4. Remove all clear pull-plug of the air vent for flow inks to run.
5. Complete this with all of the cartridges in the set and then fit the cartridges into your printer.
6. Run two or three cleaning cycles to get a good nozzle pattern.
- 7.- You can also turn the WorkForce 30 off and wait at least 2 hours before turning on. for flow inks to run Then you are ready to print

Important Note

• **level of ink can not viewed on a computer, you have to check in your printer because refilled ink cartridges for it never expires**

- **These refillable cartridges must be used as a whole set and not separate. Otherwise the Printer will not recognize the refillable cartridges.**
- **Do not let the cartridges run out of ink.**




-You must to use whole set refillable cartridges,
cannot mixed with original or other cartridges.

 
- If you use whole set cartridges but printer not recognize. Please remove the whole set refillable cartridges, turn off printer and disconnect the printer cable/USB for 30 mins. Turn on your printer and re-insert the whole set refillable cartridges "Black color cartridge first" after insert other colors. Let see if your printer recognize the cartridges or not. After printer recognize the cartridges then you can connect back the printer cable/USB.
- If your printer recognized the whole set cartridges but won't print. Please remove the whole set refillable cartridges and use syringe without needle to draw air/ink from the cartridge ink outlet hole approx. 1 cm (this will solve the problem for missing color and printer with white line).

Check the Print Head Nozzles for WorkForce 30

You can print a nozzle check pattern to check for clogged nozzles using the WorkForce 30 Series control panel or your software.

From the Control Panel


1. Load a few sheets of plain paper in the sheet feeder.
2. Turn off the WorkForce 30 Series.
3. Hold down the  paper button as you press  the power button to turn the WorkForce 30 Series back on. Hold down both buttons until the  power light begins to flash, then release the buttons

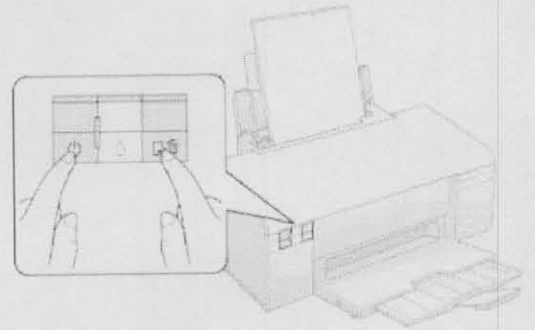

4. Check the nozzle check pattern that prints to see if there are gaps in the lines



 Nozzles are clean

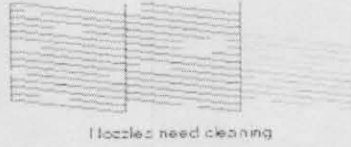

Nozzles need cleaning

5. If there are no gaps, the print head is clean and you can continue printing. If there are gaps or the pattern is faint, clean the print head.

From the Computer

1. Load a few sheets of plain paper in the sheet feeder.
2. Windows: Right-click the printer icon in the bottom right corner of your screen (the taskbar) and select NozzleCheck.

Macintosh: Open the Applications folder, open the EPSON Printer Utility3, select WF 30 Series, and click OK. Then select Nozzle Check.



3. Click Print.

4. Check the nozzle check pattern that prints to see if there are gaps in the lines.



Nozzles are clean



Nozzles need cleaning

5. If there are no gaps, click Finish. If there are gaps or the pattern is faint, clean the print head.

Clean the Print Head Nozzles


If print quality has declined and the nozzle check pattern indicates clogged nozzles, you can clean the print head.

 
You cannot clean the print head without ink, and may not be able to clean it when a cartridge is low ink, level of ink can not viewed on a computer, you have to check in your printer because refilled ink cartridges for it never expires


Do not let the cartridges run out of ink .

You can clean the print head using the WorkForce 30 Series control panel or your software. t the cleaning cycle, which lasts around 1 minute.

Using the Control Pane

1. Load a few sheets of plain paper in the sheet feeder.
2. Hold down the  ink button for at least 3 seconds to start the cleaning cycle, which lasts around 1 minute.

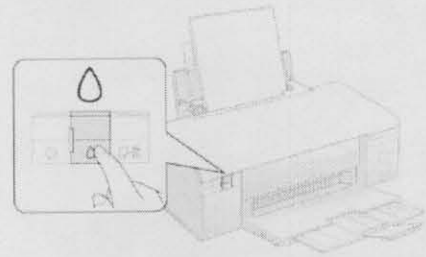

The  power light flashes the cleaning cycle and stays on green when the cycle is finished.

 
Caution:


Never turn off the WorkForce 30 Series during a cleaning cycle or you may damage it.

3. Run a nozzle check to confirm that the print head is clean.
You may need to clean the print head up to 4 times. You can also turn the WorkForce 30 Series off and wait at least 6 hours before turning on. Then try printing again and repeat step.

From the Computer


1. Load a few sheets of plain paper in the sheet feeder.
2. Windows: Right-click the printer icon in the bottom right corner of your screen (the taskbar - maintenance) and select Head Cleaning.
Macintosh: Open the Applications folder, open the EPSON Printer Utility3, select WF 30 Series, and click OK. Then select Head Cleaning.

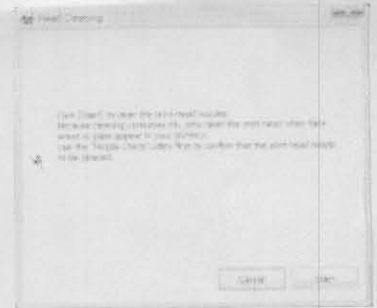

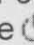3. Follow the on-screen instructions to start the cleaning cycle, which lasts around 1 minute. The  power light flashes throughout the cleaning cycle and stays on green when the cycle is finished.

Caution:

Never turn off the WorkForce 30 Series during a cleaning cycle or you may damage it.

4. When the  power light stops flashing and remains on, you can check to see if the nozzles are clean: Click Print Nozzle Check Pattern and click Print.
5. Check the nozzle check pattern that prints to see if there are gaps in the lines.



nozzle are Clean



nozzle need Cleaning

6. If there are no gaps, click Finish.
If there are gaps or the pattern is faint, click Clean to clean the print head again.

You may need to clean the print head up to 4 times. You can also turn the WorkForce 30 Series off and wait at least 6 hours. Then try printing again.

How Register Your Printer

If you have not installed your printer software yet, you can register your product when you install your printer software using the software CD that came with the printer. A registration screen will appear at the end of the installation process.

If you've already installed the printer software and either cancelled or had problems registering, you can register online. To register online, visit www.epson.com. Choose your country (if necessary), then click Product Registration at the top of the page. Follow the on-screen instructions to complete all of the required information.

Epson Online Register for one year warranty go:


<http://www.onlineregister.com/epson/app/>

Please select your country and model.

* Language:	English	▼
* Country:	USA	▼
* Family:	Inkjet Printer	▼
* Model:	EPSON WorkForce 30	▼

Please click "Next" below to continue.

 Serial number

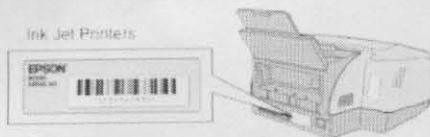

In-Warranty Repair

An Epson Authorized Servicer is available to assist you with repairs. Repair service is easy—carry your Epson product, along with proof of the date of original purchase to the nearest servicer in your area. Epson's nationwide base of Authorized Servicers are conveniently located to assist you with your repair needs. Your System Device product is covered against defects in materials and workmanship during the warranty period. While under warranty, all replacement parts and labor are provided without charge.

Out-Of-Warranty Repair

An Epson Authorized Servicer can provide you with diagnostic service and assistance. Our Authorized Servicers can provide you with options to minimize expenses and provide you with the high quality service you've come to expect from Epson.

locate the nearest Authorized Service Provider in your area go to:

<http://pos.epson.com/service/servPW.htm>

IMPORTANT NOTE:

If you will ask for repair your printer, please don't forget to remove the cartridges inks.